


The incorrect routing can lead to a number of operation and performance issues. In this guide, we will give you our expert advice to help to avoid these common issues.

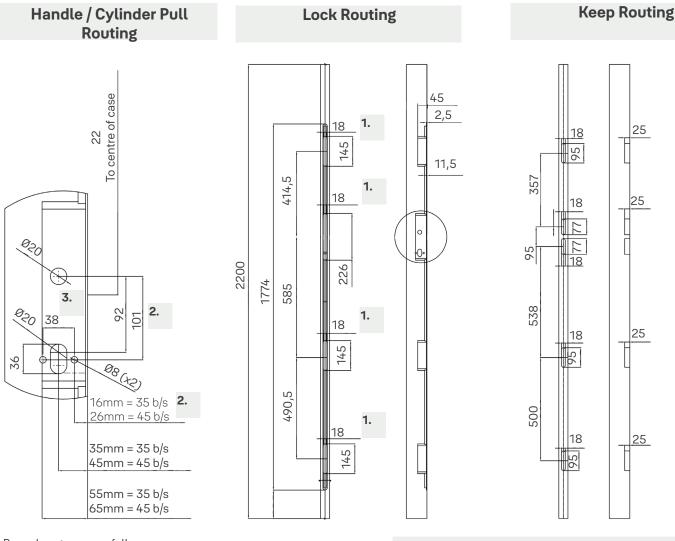


Prep changes are as follows:

- 1. Pocket prep opened to 18mm to reduce the chance of pinching around the locking units and to allow for better centralisation of the lock within the door slab
- 2. Dimension added (101mm) from Spindle centre line to centre of fixing screw this is crucial when fitting the cylinder pull. Note: this is a critical dimension
- **3.** Recommended Cylinder Pull fixing screw dimension (38mm) added
- 4. Required Eurogroove depth added

Trusted every day



4.

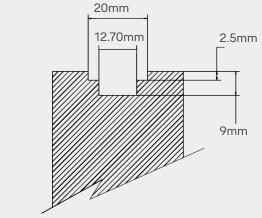

Note: If a 16mm faceplate lock is being used without a carrier please refer to Yale Technical Services team.

Yale School Street, Willenhall, West Midlands, WV13 3PW T: 01902 366800 www.yaledws.co.uk Prep rev. 6